Ritter®

Installation Instructions

9A21000X Sideboard Assembly

KIT COMPONENTS

Part Number	Description	Qty.
9A21000X	Sideboard Assembly (Includes Rt. & Lt. Sideboards)	1
003-0736-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Head Screwdriver
Power Hand Drill
3/32” Drill Bit
Measuring Tape

IMPORTANT INSTRUCTIONS

Provides patient support and security.

EQUIPMENT ALERT
Do not use simultaneously on same side of table with 9A0200X Armboard.

INSTALLATION (1)

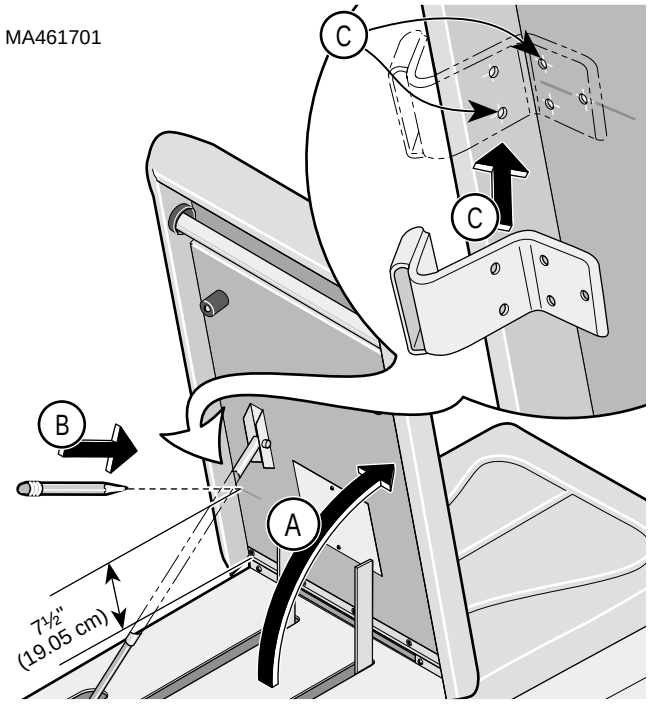

A. Place backrest in maximum “Up” position.
B. Working from side opposite upholstery side, measure up from bottom of hinge on backrest 7 1/2” (19.05 cm) and place a mark.
C. Center table bracket on mark and mark locations of five mounting holes.

INSTALLATION (2)

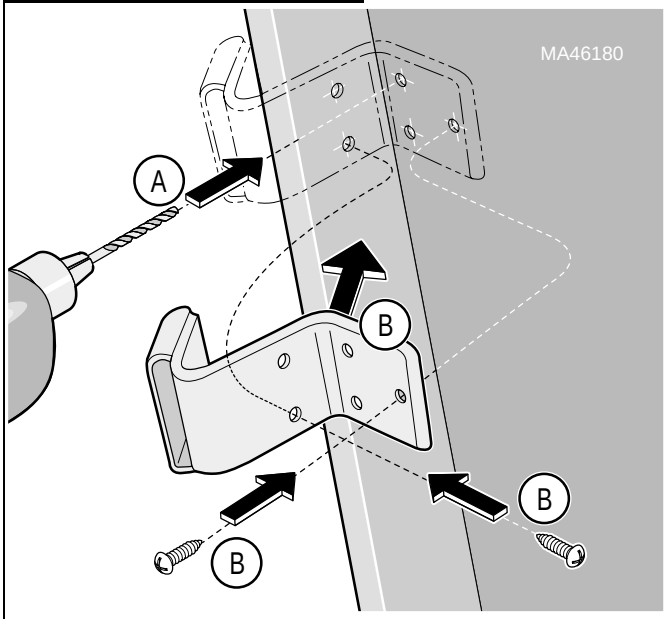

EQUIPMENT ALERT
Do not drill any deeper than 1/2” (1.3 cm) when drilling mounting holes for bracket.

A. Using 3/32” drill bit, drill holes 1/2” (1.3 cm) deep at location marks.
B. Install bracket and secure with five #10-12 x 1” (2.54 cm) screws.

INSTALLATION (3)

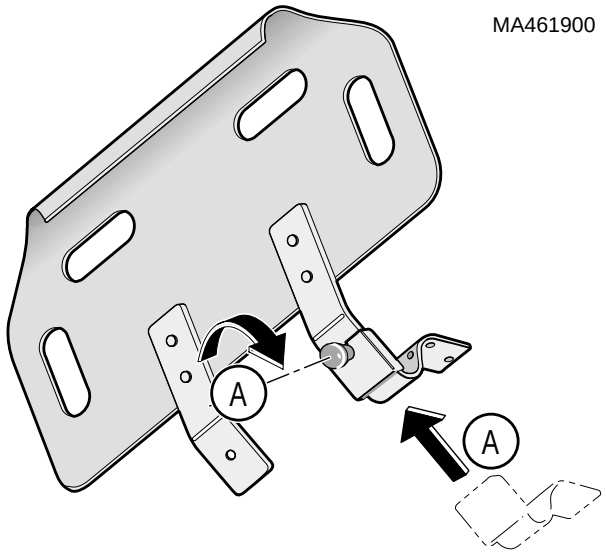

A. Place second table bracket in position on sideboard bracket and tighten knob.

© Midmark Corporation - 1998

INSTALLATION (4)

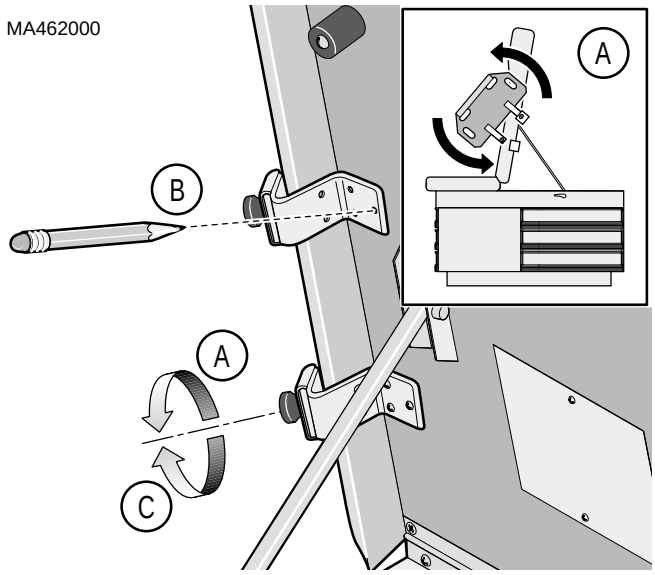

A. Place sideboard in position on table, inserting sideboard bracket into table bracket. Tighten knob.

B. Mark mounting hole locations of table bracket that is installed on sideboard.

C. Loosen knob and remove sideboard from table bracket installed on backrest.

INSTALLATION (5)

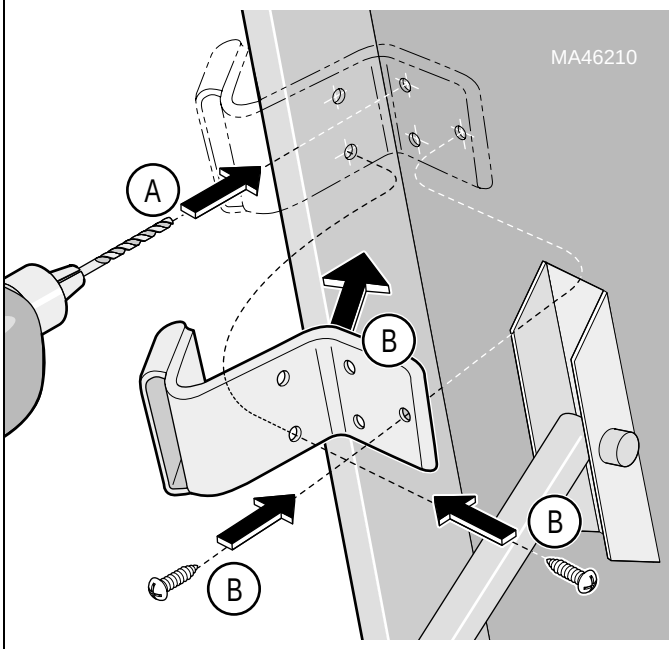

EQUIPMENT ALERT

Do not drill any deeper than 1/2” (1.3 cm) when drilling mounting holes for bracket.

A. Using 3/32” drill bit, drill holes 1/2” (1.3 cm) deep at location marks.

B. After removing table bracket from sideboard, install bracket on backrest and secure with five #10-12 x 1” (2.54 cm) screws.

INSTALLATION (6)

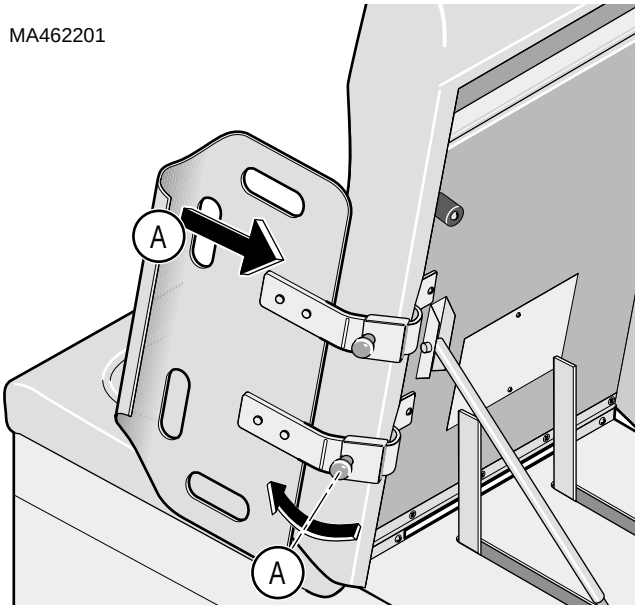

A. Install sideboard assembly onto table brackets and tighten knobs.

NOTE

Install other sideboard assembly and brackets in same manner.

INSTALLATION (7)

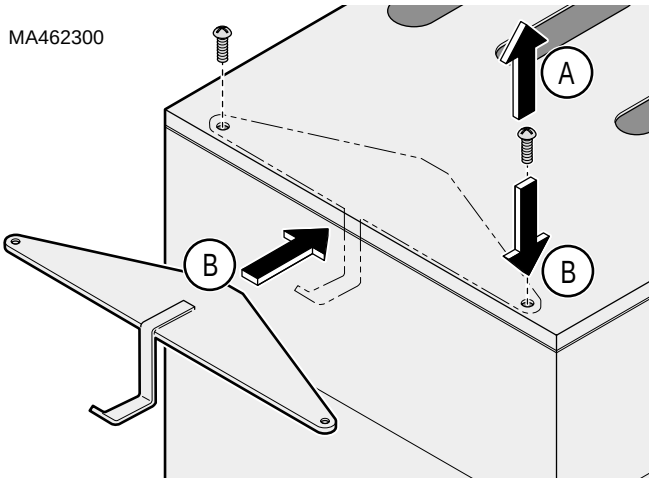

NOTE

The following pertains to installation of Siderail Hanger. Certain kits may not contain the Hanger.

A. Remove two screws at head-end of top cover assembly.

B. Place Siderail Hanger in position and re-install two screws.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0736-00 Rev. D (11/01)

© Midmark Corporation - 1998